

OBDLink LX Bluetooth

Android Quick Start Guide



ScanTool.net

1 Download & install OBDLink app


Scan the QR code or visit the URL from your Android device to download the OBDLink app:



obdlink.com/app


2 Plug OBDLink LX into the diagnostic link connector (DLC)

The DLC is usually found on the driver's side, under the dash.

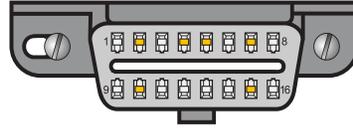

—Can't find your DLC? Visit dlc-locator.com

 3 Turn ignition on




'Power' LED will turn ON, and the 'BT' LED will start flashing *slowly*.

—LEDs are off? Check vehicle for blown fuses.


4 Open 'Settings' app, and tap 'Wireless & networks'



5 Make sure 'Bluetooth' is enabled, then tap 'Bluetooth settings'.

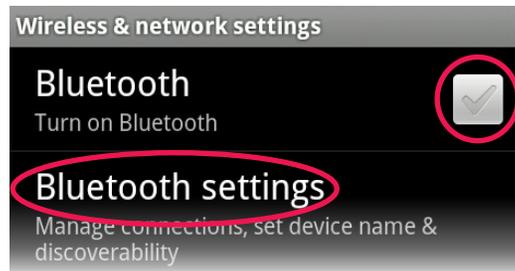

6 Press the 'Connect' button on OBDLink LX.

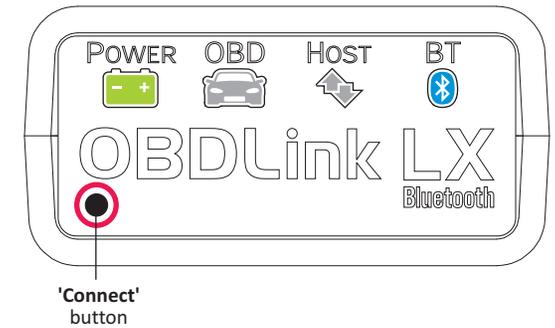

The 'BT' LED will switch to a *fast* blink.



Attention!

You must complete steps 7, 8, and 9 within **2 minutes**. If you need more time, press the button again.

7 Tap 'Scan for devices', and wait for OBDLink LX to appear on the device list.




8 Tap 'OBDLink LX - Pair with this device'




[instructions continue on reverse]

9 Tap 'Pair' in the 'Bluetooth pairing request' dialog.

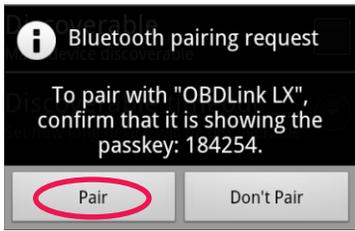

You do not need to confirm the passkey.


Once successfully paired, OBDDLink LX will appear as 'Paired but not connected':

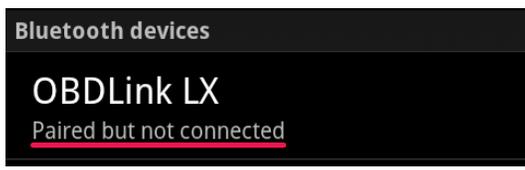

10 Launch the OBDDLink app, and tap 'Connect'



Once the connection is established, the 'BT' LED will turn on solid. Tap 'Diagnostics' to start a scan.

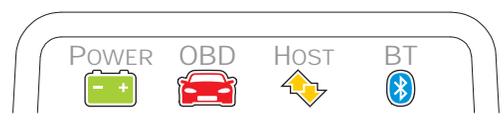

11 Optional: download third party OBD apps

We recommend Torque and DashCommand (scan the QR code, or visit the URLs from your Android device):



obdlink.com/tq



obdlink.com/dc



—Need help? Go to obdlink-lx.com/support

12 Launch your preferred app, and open the connection

Torque
Tap 'Settings', 'OBDD2 Adapter Settings', 'Choose Bluetooth Device', 'OBDDLink LX'. Return to the Torque home screen.

DashCommand
Tap 'ELM', then 'Connection'.

Thank you for your purchase!

If you like OBDDLink LX, please post your review on

