1. Download the OBDLink app

Visit www.obdlink.com/apps
or scan the QR code

2. Start the engine

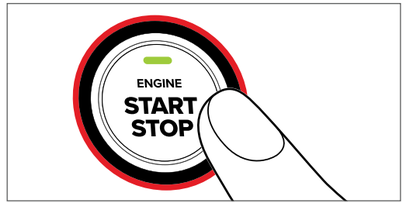

3. Plug LX into the OBD port

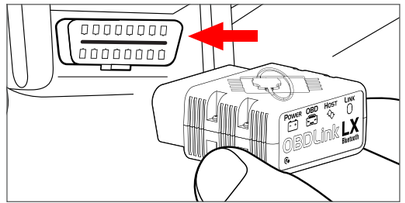

OBD port is usually in driver's footwell

4. Push the "Pair" button

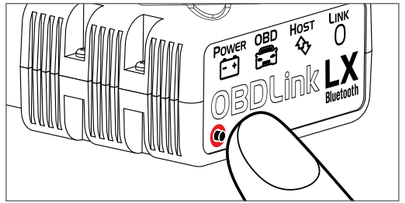

5. Go to Device Settings → Bluetooth and pair with "OBDLink LX"

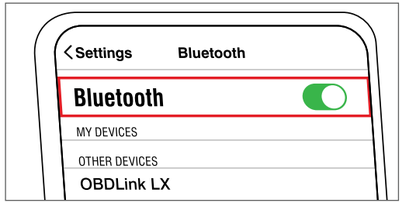

Tap **"Confirm/OK"** when prompted

6. Launch the OBDLink app and tap "Connect"

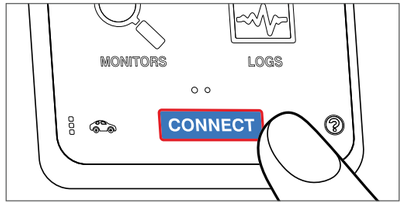

Continue to step 7

7. Select the “Bluetooth” option in Communication Type

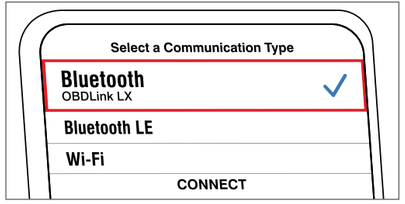

If you don’t get this prompt, go to the OBDLink app → Settings → Preferences → Communications

8. Allow location services while using app

Location data is used to enable the map feature and stays on the device

Firmware Update

If the firmware update failed:

1. Open the OBDLink app
2. Tap **Settings** → **Firmware Updates**
3. Tap **Menu** (**“...”** on some devices)
4. Select **Firmware Recovery**, tap **Yes**
5. Make sure your OBDLink device is selected and tap **Update Firmware**
6. Tap the green **Update Firmware** button

You may get a pop-up saying “OBDLink Device Not Found”, this is normal if there are no OBDLink devices registered. Tap “OK”

Do we deserve five stars?
Share your experience

leave an amazon review

facebook.com/obdlink
youtube.com/@OBDLink

Hit a speed bump?
Cruise over to our support portal or contact our friendly support team for help

obdlink.com/support
support@obdlink.com

OBDLink LX Getting Started

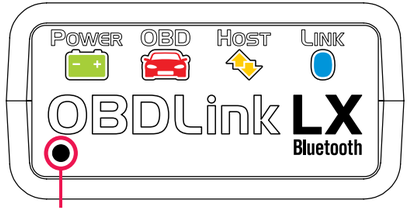

“Pair” button