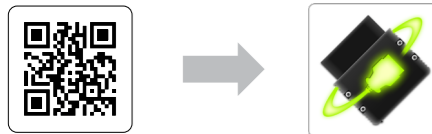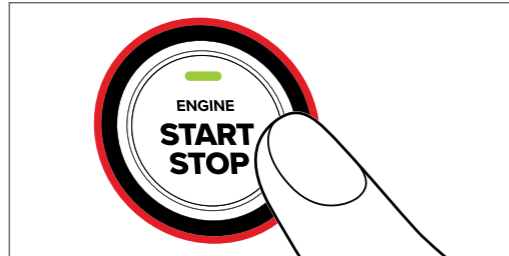**1.** Download the OBDLink app

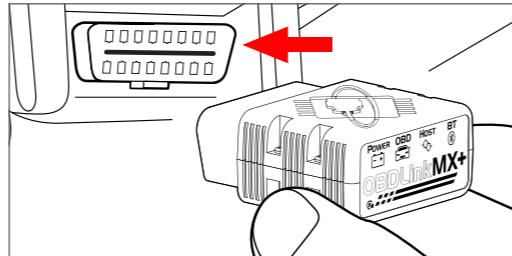

visit **www.obdlink.com/apps**
or scan the QR code

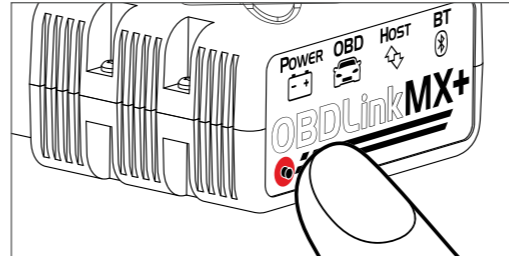**2.** Start the engine

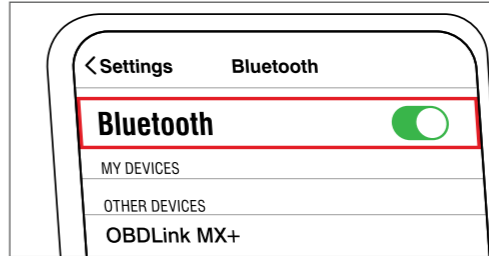**3.** Plug MX+ into the OBD port

OBD port is usually in driver's footwell
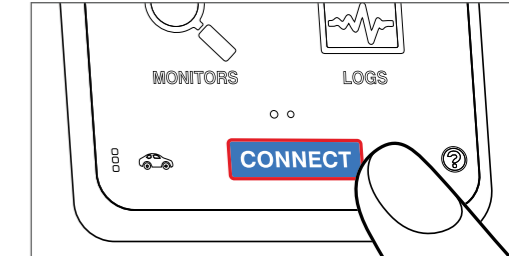
4. Push the "Pair" button

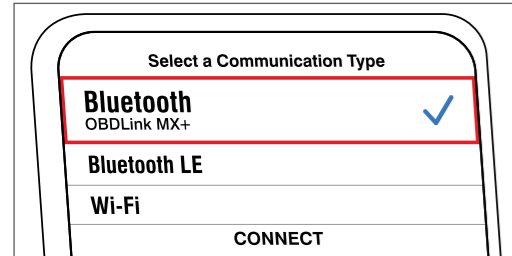**5.** Go to Device Settings → Bluetooth and pair with "OBDLink MX+"

Tap **"Confirm/OK"** when prompted
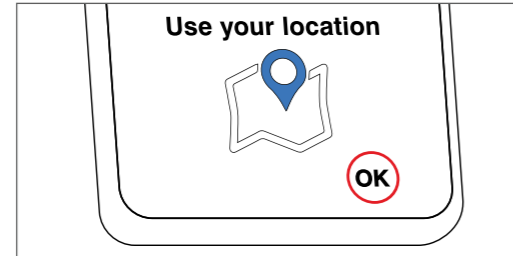
6. Launch the OBDLink app and tap "Connect"

Continue to step 7
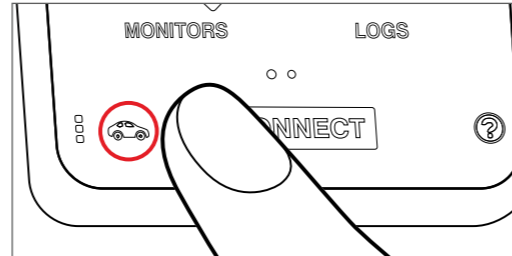
7. Select the "Bluetooth" option in Communication Type

Select a Communication Type

Bluetooth
OBDLink MX+ ✓

Bluetooth LE

Wi-Fi

CONNECT

If you don't get this prompt, go to the OBDLink app ➜ Settings ➜ Preferences ➜ Communications

8. Allow location services while using app

Use your location

OK

Location data is used to enable the map feature and stays on the device

Enhanced OEM Add-Ons

MONITORS   LOGS

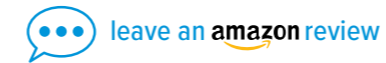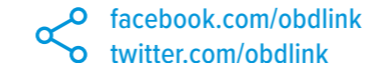CONNECT

Tap the Vehicle Editor icon, and enter the **Year, Make, Model,** and **Option** to see if an enhanced OEM add-on is available

Do we deserve five stars?
Share your experience

leave an **amazon** review

facebook.com/obdlink
twitter.com/obdlink

Did we mess up?
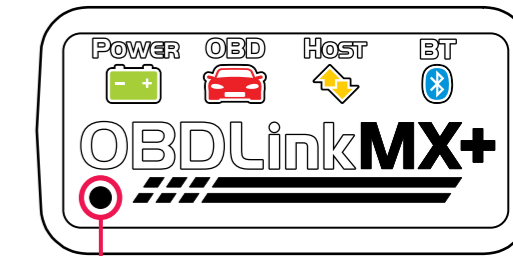Let our friendly support team make it right

obdlink.com/support

support@obdlink.com

OBDLink MX+ Getting Started

POWER   OBD   HOST   BT

OBDLinkMX+

"Pair" button