Do we deserve five stars?
Share your experience

leave an amazon review

facebook.com/obdlink
twitter.com/obdlink

Did we mess up?
Let our friendly support team make it right

obdlink.com/support

support@obdlink.com

PWR   OBD   BLE
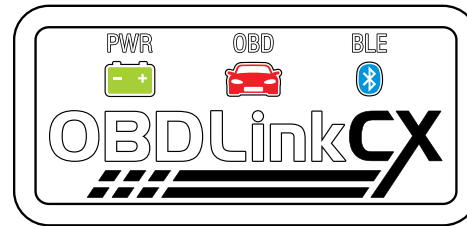
OBDLink**CX**

1. Download the OBDLink app

visit **www.obdlink.com/apps**
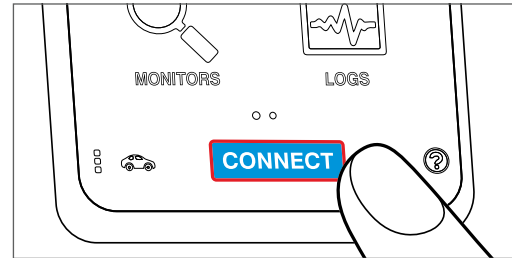or scan the QR code

2. Start the engine

ENGINE
START STOP
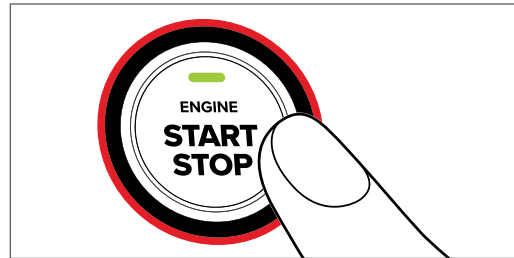
3. Plug CX into the OBD port
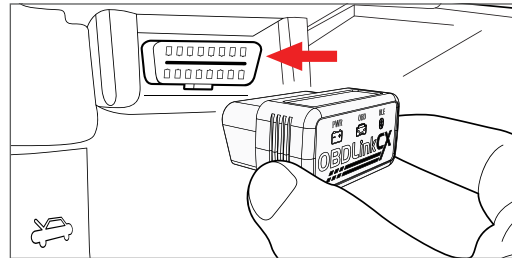
OBD port is usually in driver's footwell

4. Launch the OBDLink app and tap "Connect"

MONITORS   LOGS

CONNECT

If prompted for a PIN, please enter

| 1 | 2 | 3 | 4 | 5 | 6 |

5. Allow location services while using app

Use your location

OK
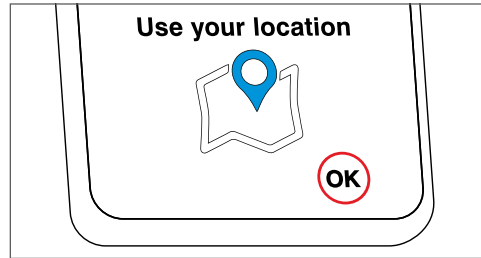
Location data is used to enable the map feature and stays on the device